


How to add HD007 to an HDC controller?

First, make sure the controller is in code learning mode (refer to the individual manual for entering code learning mode procedures).

Press the  button, your password, and .

Or press twice , , your password, and .

Keypad will transmit serial number for code learning.

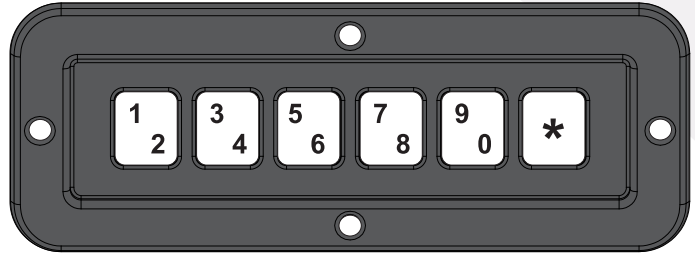

Pat. Pend.

How to use HD007 Keypad to control selected controller?

You can use HD007 to arm/lock or disarm / unlock controller unit, please refer to the description below:

**Arm/Lock:** Press the  button, your password, and . If password is correct, HD007 will transmit arm/lock code, led will flash quickly. Until you release  button, if password is incorrect, led will flash 4 times.

**Disarm/Unlock:** Press twice , , your password, and . If the password is correct, HD007 will transmit disarm/unlock code, led will flash quickly until you release the  button. If password Incorrect, led will flash 4 times.

How to modify your password?

The keypad has a factory default password of      which is an input of pressing each button once from left to right "1", "3", "5", "7", "9". For security purposes, you can change the password to a private setting.

Press , , , your old password, , new password, . If the new password was accepted, the led will flash 2 times for indication, otherwise, led will flash 4 times to indicate new password setting failure.

What to do if you forgot your password?

If you forgot your password, please contact us at [support@poplocks.com](mailto:support@poplocks.com).

How many times can you try to input password?

For security purpose, you have 3 chances to enter your password, if after 3 times the wrong password is entered the led will flash quickly for 10 seconds and the keypad is locked for 2 minutes. After 2 minutes, you can operate the keypad again.

How to replace the battery

Battery replacement is in the rear housing. Depress finger friction latch and remove back cover. Remove Part No. #GP23A 12V. Carefully replace battery observing the polarity. Reprogramming is retained during battery replacement, no programming is necessary.

Due to the proximity of the RC35a and location of HD007 it may be difficult to program a user code with in the required 5 seconds. If this is the case, simply press the last coded fob lock or unlocked once while moving too the Hd007 keypad being coded. This will extend the time x 5 seconds each time its is pushed.