


Red: +12v Power  
 Black: Ground  
 White: Warning Away Trigger

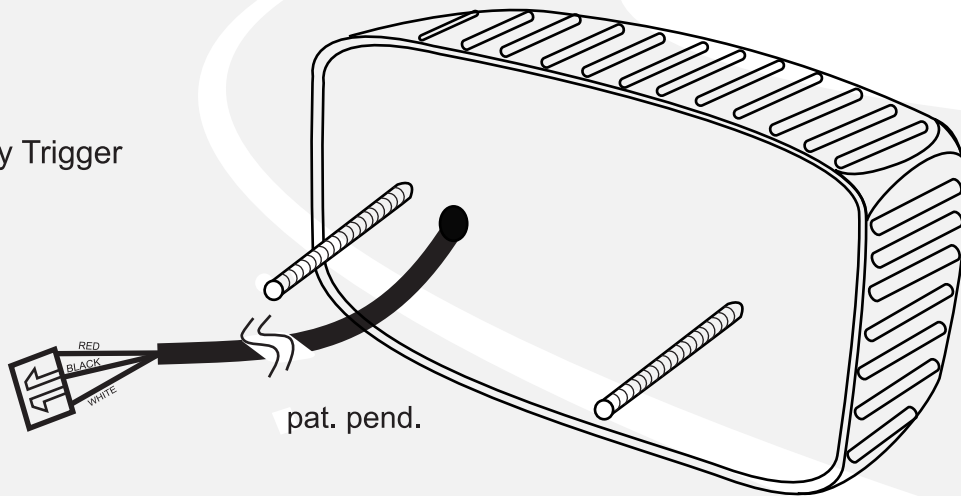


**OUTPUT:**

Adjust VR to adjust the detection range from 1.6 ft-32.8 ft. When triggered, the LED will be ON and the white wire will output a one second signal.

**LED Indicator:**

Red LED constantly on: System in 17 second power up  
 Red LED on: Interior Zone Trigger

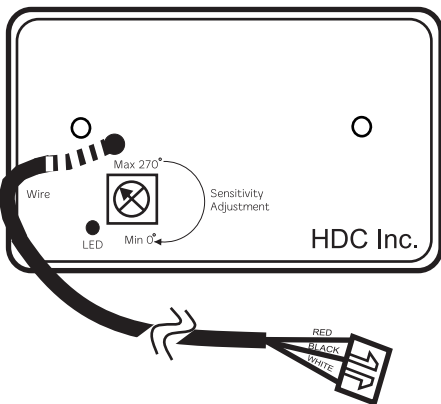

Sensitivity		Range of Detection
Min 0	VR	1.6 ft
1/3 Turn 90	VR	19.7 ft
2/3 Turn 180	VR	27.8 ft
Max 270	VR	32.8 ft

