


Technical Information

Red: +12v Power Black: Ground

White: Warning Away Trigger

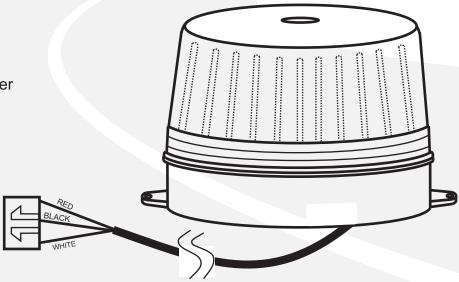

## **OUTPUT**:

Adjust VR to adjust the detection range from 1.6 ft-32.8 ft. When triggered, the LED will be ON and the white wire will output a one second signal.

## LED Indicator:

Red LED constantly on: System in 17 second power up

Red LED on: Interior Zone Trigger

$\bigcirc$	Sensitivity	Range of Detection
	Min 0 VR	1.6 ft
	1/3 Turn 90 VR	19.7 ft
	2/3 Turn 180 VR	27.8 ft
	Max 270 VR	32.8 ft